
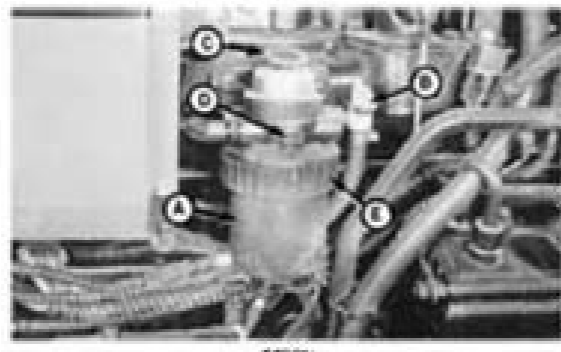


I'm not robot!

REPLACE FUEL FILTER


1. Close fuel shut-off valve (B).
2. Remove retaining ring (E) and filter (A).
3. Install new filter with retaining ring, hand tight.
4. Open fuel shut-off valve (B).
5. Open bleed screw (D).
6. Operate priming pump (C) until fuel flows.
7. Close bleed screw (D).

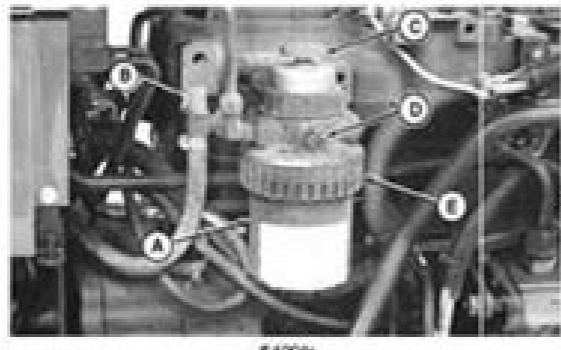

8. Bleed the fuel system (see CTM Engines).
- A—Fuel filter element
 - B—Fuel shut-off valve
 - C—Priming pump
 - D—Bleed screw
 - E—Retaining ring


REMOVE AND INSTALL FUEL FILTER / PRIMER PUMP ASSEMBLY

1. Remove right engine side shield.
2. Close fuel shut-off valve (A).
3. Disconnect fuel line (B) and (C). Close all openings using caps and plugs.
4. Remove cap screws (D). Remove fuel filter/ primer pump assembly.
5. Re-install fuel filter/ primer pump assembly.
6. Connect fuel line (B) and (C).
7. Open fuel shut-off valve (A).
8. Bleed fuel system (see CTM Engines).
9. Install right engine side shield.

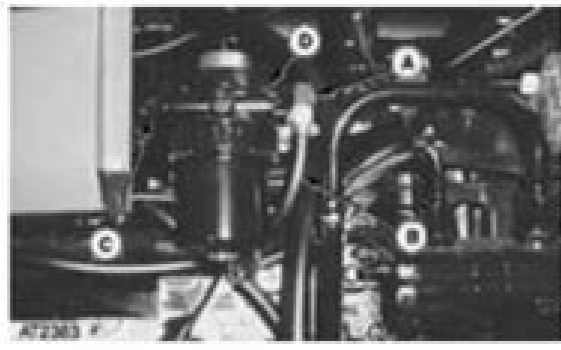

- A—Fuel Filter Shut-Off Valve
- B—Fuel Line
- C—Fuel Line
- D—Cap Screw (2 used)

**John Deere 5200 5300 5400 5500 Tractors
Service Technical Manual - TM1520**

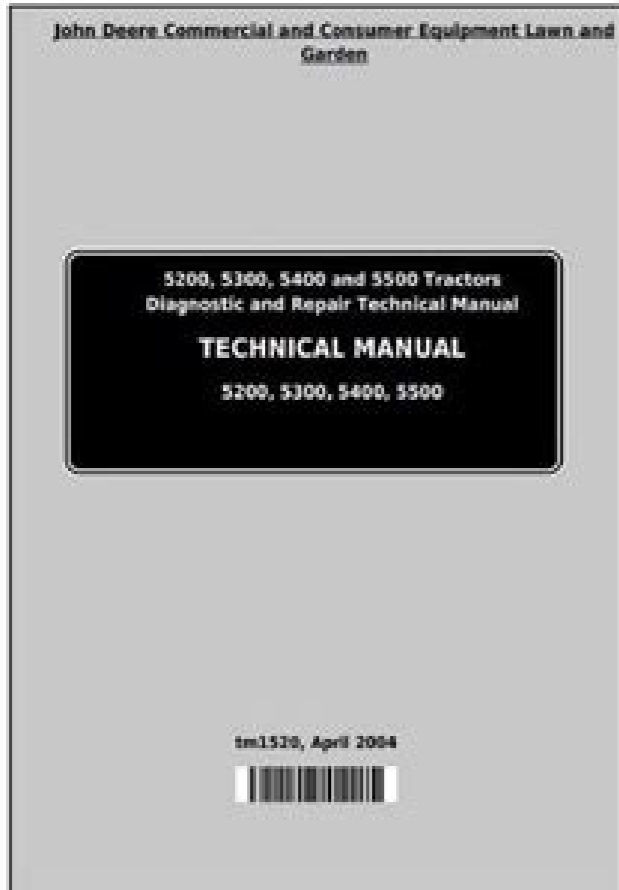

Covers: **5200 5300 5400 5500 Tractors**

Type: Service Manual

Language: English

Pages: 195

Wiring Diagram for 5300, 5400 and 5500 Cab Tractors

